

# Tratament chimic: ZGOMOT, CALORIFERE PARTIAL RECI CALORIFERE ALUMINIU



CHIMIA  
INSTALATIEI  
TERMICE

Probleme tratate: **CALCAR, NAMOL, IMPURITATI MECANICE, GAZE**

Materiale: **ALUMINIU / ALIAJE ALUMINIU / CUPRU**

## CHECK SERVICE




Verificare parametrul fluid

## CLEANEX TOTAL



Solutie 5-15%  
(cca 5kg / 100l apa)

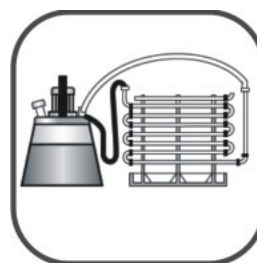

Recirculare: 15-20 min  
fiecare circuit/calorifer




Monitorizare: pH<3

## NEUTRALYZER ALCALIN



Solutie 1-4%  
(cca 1-2kg / 100l apa)

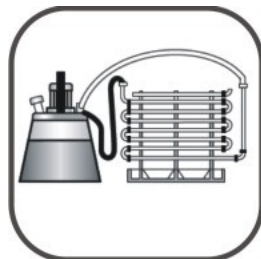

Recirculare: 5-10 min  
(fiecare  
circuit/calorifer)

## APA DEMINERALIZATA



Clatire instalatie  
pana la pH 6.5-7.5  
Incarcare cu  
apa demineralizata

## INSTAL PROTECT



Dozare 1-2%  
(cca. 1kg / 100l)

## OXI REDUCT



Pentru calorifere Al  
si instalatie Cu  
Dozare 1-2%  
(cca. 1kg/100l)